

5300N, 5400N and 5500N Tractors

For complete service information, also see:

Engines

PDF



DOWNLOAD



John Deere Werke Mannheim
TM4598 (10JAN00)

European Version

Printed in Germany

ENGLISCH

Foreword

FOREWORD

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.



This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

Contents

SECTION 05—SAFETY

Group 05—Safety

SECTION 10—GENERAL SPECIFICATIONS

Group 05—Machine Specifications
Group 10—Fuel, Lubricants and Coolant
Group 15—Serial Number Locations

SECTION 20—ENGINE — REPAIR

Group 00—Removal and Installation of Engine Components

SECTION 30—FUEL AND AIR INTAKE SYSTEMS — REPAIR

Group 05—Fuel System
Group 10—Speed Control Linkage
Group 15—Air Intake System

SECTION 40—ELECTRICAL SYSTEM — REPAIR

Group 05—Battery, Starting Motor and Alternator
Group 10—Switches and Sending Units
Group 15—Wiring Harnesses

SECTION 50—POWER TRAIN — REPAIR

Group 00—Removal and Installation of Power Train Components
Group 05—Clutch
Group 10—Hi-Lo System (24/24-Speed Transmission)
Group 15—Power Take-Off
Group 20—Differential
Group 25—Final Drives
Group 30—Mechanical Front Wheel Drive
Group 35—MFWD Clutch - 12/12-Speed Transmission
Group 40—MFWD Clutch - 24/24-Speed Transmission
Group 45—Transmission

SECTION 60—STEERING AND BRAKE SYSTEMS — REPAIR

Group 05—Steering System
Group 10—Brake System

SECTION 70—HYDRAULIC SYSTEM — REPAIR

Group 05—Hydraulic Pump and Filter
Group 10—Rockshaft
Group 15—Selective Control Valves

SECTION 80—MISCELLANEOUS — REPAIR

Group 05—Front Axle (without MFWD)
Group 10—Front Wheel Bearings
Group 15—Three-Point Hitch

SECTION 90—OPERATOR'S STATION — REPAIR

Group 05—Operator's Seat and Support
Group 10—Roll-Gard
Group 15—Fenders
Group 20—Cab Components
Group 25—Air Conditioning System

SECTION 240—ELECTRICAL SYSTEM — OPERATION AND TESTS

Group 05—Component Location
Group 10—Theory of Operation
Group 15—Diagnosis, Tests and Adjustments
Group 20—Wiring Diagrams

SECTION 250—POWER TRAIN — OPERATION AND TESTS

Group 05—Component Location
Group 10—Theory of Operation
Group 15—Diagnosis, Tests and Adjustments

SECTION 260—STEERING AND BRAKE SYSTEMS — OPERATION AND TESTS

Group 05—Component Location
Group 10—Theory of Operation
Group 15—Diagnosis, Tests and Adjustments

SECTION 270—HYDRAULIC SYSTEM — OPERATION AND TESTS

Group 05—Component Location
Group 10—Theory of Operation
Group 15—Diagnosis
Group 20—Tests

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

TM4598-19-10JAN00

COPYRIGHT© 2000
DEERE & COMPANY
European Office Mannheim
All rights reserved
A John Deere ILLUSTRATION— Manual

Group 25—Adjustments
Group 30—Hydraulic System Schematic

SECTION 290—OPERATOR'S STATION

Group 05—Air Conditioning System Components
Group 05—Air Conditioning System - Theory of
Operation

**SECTION 299—SPECIAL TOOLS —
SELF-MANUFACTURED**

Group 05—Manufacturing the Tools

Index

Section 05 SAFETY

Contents

Page

Group 05—Safety	05-05-1
-----------------------	---------



Thank you very much
for your reading.
Please click here
to get more information.