



# F910/F930 Front Mower



JOHN DEERE

## TECHNICAL MANUAL

F910/F930  
Front Mower

TM1301 (01APR86) English



TM1301 (01APR86)

LITHO IN U.S.A.  
ENGLISH





# F910/F930 FRONT MOWER TECHNICAL MANUAL TM-1301 (Apr-86)

## SECTION AND GROUP CONTENTS

### SECTION 10—GENERAL

- Group 05—Introduction and Safety Information
- Group 10—General Specifications
- Group 15—Cap Screw Torque
- Group 20—Tune-Up
- Group 25—Fuel and Lubrication
- Group 30—Serial Numbers

### SECTION 20—ENGINE REPAIR

- Group 05—Engine Removal and Installation
- Group 10—Muffler

### SECTION 30—FUEL AND AIR REPAIR

- Group 05—Fuel Pump
- Group 10—Fuel Tanks, Fuel Filters, Fuel Valve  
and Lines

### SECTION 40—ELECTRICAL REPAIR

- Group 05—PTO Clutch

### SECTION 50—POWER TRAIN REPAIR

- Group 05—Transmission
- Group 10—Transmission Hand Control Linkage  
( -360,000)
- Group 11—Transmission Foot Control Linkage  
(360,001- )
- Group 15—Differential
- Group 20—Axles

### SECTION 60—STEERING AND BRAKES REPAIR

- Group 05—Steering Valve
- Group 10—Brakes
- Group 15—Brake and Park Brake Linkage ( -  
360,000)
- Group 16—Brake and Park Brake Linkage (360,001-  
)
- Group 20—Rear Axle and Wheels

### SECTION 70—HYDRAULICS REPAIR

- Group 05—Hydraulic Control Valve
- Group 10—Weight Transfer Valve

*Continued on next page*

**SECTION 80—MISCELLANEOUS REPAIR**

- Group 05—Mower Gearbox
- Group 10—Mower Spindle

**SECTION 210—GENERAL**

- Group 05—Machine Operational Checkout

**SECTION 220—ENGINE OPERATION AND TESTS**

- Group 05—System Checkout
- Group 10—System Diagnosis

**SECTION 230—FUEL AND AIR OPERATION AND TESTS**

- Not used—Refer to Section 220

**SECTION 240—ELECTRICAL OPERATION AND TESTS**

- Group 05—System Checkout
- Group 10—System Diagnosis
- Group 15—Component Tests
- Group 20—Theory of Operation

**SECTION 250—POWER TRAIN OPERATION AND TESTS**

- Group 05—Transmission Hand Control Linkage Adjustment ( , -360,000)
- Group 06—Transmission Foot Control Linkage Adjustment (360,000- , )
- Group 10—Power Train Test and Adjustment
- Group 15—Theory of Operation

**SECTION 260—STEERING AND BRAKES OPERATION AND TESTS**

- Group 05—Theory of Operation

**SECTION 270—HYDRAULICS OPERATION AND TESTS**

- Group 05—Theory of Operation

*All information, illustrations and specifications contained in this technical manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

COPYRIGHT® 1986  
DEERE & COMPANY  
Moline, Illinois  
All rights reserved  
A JOHN DEERE ILLUSTRATION

M45;0000A 1A 160486

# Section 10

# GENERAL INFORMATION

## CONTENTS

	Page	Page
<b>GROUP 05—INTRODUCTION AND SAFETY</b>		
Introduction . . . . .	10-05-1	
Safety . . . . .	10-05-2	
<b>GROUP 10—GENERAL SPECIFICATIONS</b>		
Specifications		
F910 Front Mower . . . . .	10-10-1	
F930 Front Mower . . . . .	10-10-2	
<b>GROUP 15—CAP SCREW TORQUE</b>		
Bolt Torque Chart . . . . .	10-15-1	
Metric Hardware Torque Specifications . . . . .	10-15-2	
O-Ring Boss Fitting Service		
Recommendations . . . . .	10-15-3	
<b>GROUP 20—TUNE-UP</b>		
Tune-Up		
Specifications . . . . .	10-20-1	
Adjustments . . . . .	10-20-2	
<b>GROUP 25—FUEL AND LUBRICATION</b>		
Fuel . . . . .		10-25-1
Fuel Storage . . . . .		10-25-1
Engine Oil . . . . .		10-25-2
Transmission-Hydraulic Oil . . . . .		10-25-2
General Purpose Grease . . . . .		10-25-3
Cold Weather Operation . . . . .		10-25-3
Alternative Lubricants . . . . .		10-25-3
Lubricant Storage . . . . .		10-25-4
<b>GROUP 30—SERIAL NUMBERS</b>		
Serial Numbers		
Tractor PIN . . . . .		10-30-1
Engine . . . . .		10-30-1
Transmission . . . . .		10-30-2
Differential . . . . .		10-30-2
Hydraulic Control Valve . . . . .		10-30-2

M45;1000A 1 271185



Thank you very much  
for your reading.  
Please click here  
to get more information.