

XUV835E, XUV835M and XUV835R Gator™ Utility Vehicles

(SN. 010001-)



JOHN HARE



COLLECTION

TECHNICAL MANUAL

**XUV835E, XUV835M and XUV835R Gator™ Utility
Vehicles (SN. 010001-)**

TM145519 01DEC18 (ENGLISH)



Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.



CAUTION:

This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components.

Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

DX,TMIFC-19-20140415

Section 10 - General Information

[Group 10 - Safety](#)
[Group 20 - General Specifications](#)
[Group 30 - Fuel and Lubricants](#)
[Group 40 - Machine Specifications](#)

Section 20 - Engine Repair

[Group 10 - Engine](#)

Section 30 - Electrical Repair

[Group 10 - Wiring Harnesses](#)

Section 40 - Power Train Repair

[Group 10 - Transmission](#)
[Group 20 - Axles and Driveshaft](#)
[Group 30 - Mechanical Four Wheel Drive](#)

Section 50 - Steering and Brake Repair

[Group 10 - Steering](#)
[Group 20 - Brakes](#)

Section 60 - Operator`s Station Repair

[Group 10 - Operator`s Station](#)

Section 70 - Miscellaneous Repair

[Group 10 - Wheels](#)
[Group 20 - Hood, Cargo Box, and Bumper](#)
[Group 30 - Miscellaneous Repair](#)

Section 220 - Engine Operation, Tests and Adjustments

[Group 10 - Component Location](#)
[Group 20 - Theory of Operation](#)
[Group 30 - Diagnosis](#)
[Group 40 - Tests and Adjustments](#)

Section 230 - Electrical Operation, Tests and Adjustments

[Group 5 - General Information](#)
[Group 10 - Component Location](#)
[Group 20 - Theory of Operation](#)
[Group 30 - Schematics](#)
[Group 40 - Schematics, Kits](#)
[Group 50 - Connector Information](#)
[Group 60 - Tests and Adjustments](#)

Section 240 - Control Unit Operation, Tests and Adjustments

[Group 10 - Theory of Operation](#)
[Group 20 - Diagnostic Trouble Codes, ICC](#)
[Group 30 - Diagnostic Trouble Codes, ECU](#)
[Group 40 - Diagnostic Trouble Codes, SCU](#)

Section 250 - Power Train Operation, Tests and Adjustments

[Group 10 - Component Location](#)
[Group 20 - Theory of Operation](#)
[Group 30 - Diagnosis](#)
[Group 40 - Tests and Adjustments](#)

Section 260 - Steering and Brake Operation, Tests and Adjustments

[Group 10 - Component Location](#)
[Group 20 - Theory of Operation](#)
[Group 30 - Diagnosis](#)
[Group 40 - Tests and Adjustments](#)

Section 299 - Service Tools

[Group 10 - Service Tools and Kits](#)

Section 10

General Information

Contents

	Page		Page
Group 10 - Safety		Protect Against High Pressure Spray.....	10-10-7
Recognize Safety Information	10-10-1	Live With Safety	10-10-7
Understand Signal Words.....	10-10-1	Group 20 - General Specifications	
Follow Safety Instructions.....	10-10-1	Service Recommendations for O - Ring Boss Fittings.....	10-20-1
Practice Safe Maintenance.....	10-10-2	Service Recommendations For Flat Face O - Ring Seal Fittings	10-20-2
Use Proper Tools	10-10-2	Metric Cap Screw Torque Values - Grade 7	10-20-2
Handle Fluids Safely - Avoid Fires	10-10-2	Metric Bolt and Screw Torque Values.....	10-20-3
Drain Gasoline When Storing Machine	10-10-3	Unified Inch Bolt and Screw Torque Values	10-20-4
Handling Batteries Safely	10-10-3	Group 30 - Fuel and Lubricants	
Prepare for Emergencies.....	10-10-4	Gasoline Engine Oil.....	10-30-1
Park Machine Safely.....	10-10-4	Oil Filters	10-30-1
Support Machine Properly	10-10-4	Gasoline Fuel for 4 - Cycle Engines.....	10-30-1
Wear Protective Clothing.....	10-10-4	Transmission and Hydraulic Oil.....	10-30-2
Work in Clean Area	10-10-5	Grease.....	10-30-2
Service Machines Safely	10-10-5	Mixing of Lubricants	10-30-2
Work In Ventilated Area	10-10-5	Alternative and Synthetic Lubricants	10-30-2
Illuminate Work Area Safely	10-10-5	Lubricant Storage	10-30-3
Replace Safety Signs	10-10-6	Group 40 - Machine Specifications	
Use Proper Lifting Equipment.....	10-10-6	Machine Specifications.....	10-40-1
Keep ROPS Installed Properly	10-10-6	Product Identification Number Location	10-40-1
Follow Tire Recommendations	10-10-6		
Decommissioning - Proper Recycling and Disposal of Fluids and Components	10-10-7		



Thank you very much
for your reading.
Please click here
to get more information.