

3032E, 3036E, and 3038E Compact Utility Tractors (SN. from 610000) Diagnostic and Repair Manual (August 2014)



TECHNICAL MANUAL

Compact Utility models 3032E, 3036E, 3038E (SN. 610000-)

TM127919 13 AUG 14 (ENGLISH)

For complete service information also see:

Compact Utility Tractors 3032E, 3036E and 3038E Diagnostic and Repair	TM100619
Machine Connection Information	CTM441
3TNV86, 4TNV86, 3TNV88, and 4TNV88 Diesel Engines(Final Tier 4/Stage IV platform)	CTM120419



Table of contents

FOREWORD

Section 10 - SAFETY

Group 05 - Safety

Section 20 - SPECIFICATIONS AND INFORMATION

Group 05 - General Specifications

Group 10 - Fuel and Lubricants

Group 15 - Serial Number Locations

Section 25 - DIAGNOSTIC TROUBLE CODES

Group 05 - General References

Group 10 - Instrument Cluster Control (ICC) Diagnostic Trouble Codes

Group 15 - Engine Control Unit (ECU) Diagnostic Trouble Codes

Section 30 - ENGINE—DIESEL

Group 05 - Specifications

Group 10 - Component Location

Group 15 - Theory of Operation

Group 20 - Diagnostics

Group 25 - Tests and Adjustments

Group 30 - Repair

Section 40 - ELECTRICAL

Group 05 - General Information

Group 10 - Specifications

Group 15 - Component Location

Group 20 - Schematics and Harnesses

Group 25 - Operation and Diagnostics

Group 30 - Tests and Adjustments

Group 35 - Repair

Section 40A - ELECTRICAL — 3036E

Group 05 - Component Location

Group 10 - Schematics and Harnesses

Group 15 - Operation and Diagnostics

Section 45 - ELECTRONIC CONTROL UNITS

Group 05 - General References

Group 10 - Theory of Operation

Group 15 - Programming and Calibrations

Group 20 - Test and Adjustments

Group 25 - Diagnostic Addresses

Section 50 - POWER TRAIN

Group 05 - Specifications

Group 10 - Component Location

Group 15 - Theory of Operation

Group 20 - Diagnostics

Group 25 - Troubleshooting

Group 30 - Tests and Adjustments

Group 35 - Repair

Section 60 - HYDRAULICS

Group 05 - Specifications

Group 10 - Component Location and Schematics

Group 15 - Theory of Operation

Group 20 - Troubleshooting

Group 25 - Tests and Adjustments

Group 30 - Repair

Section 70 - STEERING

Group 05 - Specifications
Group 10 - Component Location
Group 15 - Theory of Operation
Group 20 - Diagnostics
Group 25 - Tests and Adjustments
Group 30 - Repair

Section 80 - BRAKES

Group 05 - Specifications
Group 10 - Component Location
Group 15 - Theory of Operation
Group 20 - Diagnostics
Group 25 - Tests and Adjustments
Group 30 - Repair

Section 90 - MISCELLANEOUS

Group 05 - Specifications
Group 10 - Component Location
Group 15 - Repair

Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.

☐ This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.



Thank you very much
for your reading.
Please click here
to get more information.