 


310E Backhoe Loader Repair



REPAIR TECHNICAL MANUAL

Backhoe Loader model 310E

TM1649 22 FEB 05 (ENGLISH)

For complete service information also see:

310E Backhoe Loader Diagnostic	TM1648
Alternators and Starting Motors	CTM77
Front Wheel Drive Axles	CTM4509
Series 300 - 3179,4239,6359,4276,6414 Diesel Engines	CTM4

PowerTech 4.5L & 6.8L Diesel Engines
Tier 1/Stage I, Tier 2/Stage II, T
IIIA, Tier 3/Stage IIA Tier 3/Stag
Engine)

PDF



DOWNLOAD



John Deere Construction and Forestry
Printed by Belgreen



TM1649

Table of contents

FOREWORD

HELP!! HELP!! HELP!! HELP!!

Section 00 - GENERAL INFORMATION

Group 0001 - Safety Information

Group 0002 - General Specifications

Group 0003 - Torque Values

Group 0004 - Fuels and Lubricants

Section 01 - WHEELS

Group 0110 - Powered or Non-Powered Wheels and Fastenings

Section 02 - AXLES AND SUSPENSION SYSTEMS

Group 0225 - Input Drive Shafts and U-Joints

Group 0230 - Non-Powered Wheel Axles

Group 0240 - Powered Wheel Axle (MFWD)

Group 0250 - Axle Shaft, Bearings and Reduction Gears

Group 0299 - Dealer Fabricated Tools

Section 03 - TRANSMISSION

Group 0300 - Removal and Installation

Group 0315 - Controls Linkage

Group 0325 - Input Drive Shafts and U-Joint

Group 0350 - Gears, Shafts, Bearings, and Power Shift Clutch

Group 0360 - Hydraulic System

Group 0399 - Dealer Fabricated Tools

Section 04 - ENGINE

Group 0400 - Removal and Installation

Group 0499 - Dealer Fabricated Tools

Section 05 - ENGINE AUXILIARY SYSTEMS

Group 0505 - Cold Weather Starting Aid

Group 0510 - Cooling Systems

Group 0515 - Speed Controls

Group 0520 - Intake System

Group 0530 - Exhaust System

Group 0560 - External Fuel Supply System

Section 06 - TORQUE CONVERTER

Group 0651 - Turbine, Gears and Shaft

Section 09 - STEERING SYSTEM

Group 0960 - Hydraulic System

Section 10 - SERVICE BRAKES

Group 1011 - Active Elements

Group 1060 - Hydraulic System

Section 11 - PARK BRAKE

Group 1111 - Active Elements

Section 16 - ELECTRICAL SYSTEMS

Group 1671 - Batteries, Support, and Cables

Group 1672 - Alternator, Regulator and Charging System Wiring

Group 1673 - Lighting System

Group 1674 - Wiring Harness and Switches

Group 1675 - System Controls

Group 1676 - Instruments and Indicators

Group 1677 - Motors and Actuators

Section 17 - FRAMES, CHASSIS OR SUPPORTING STRUCTURE

Group 1740 - Frame Installation

Group 1749 - Chassis Weights

Section 18 - OPERATOR'S STATION

- Group 1800 - Removal and Installation
- Group 1810 - Operator Enclosure
- Group 1821 - Seat and Seat Belt
- Group 1830 - Heating and Air Conditioning
- Group 1899 - Dealer Fabricated Tools

Section 19 - SHEET METAL AND STYLING

- Group 1910 - Hood and Engine Enclosure
- Group 1913 - Miscellaneous Shields
- Group 1921 - Grille and Grille Housing
- Group 1927 - Fenders

Section 20 - SAFETY, CONVENIENCE, AND MISCELLANEOUS

- Group 2001 - Radio
- Group 2004 - Horn and Warning Devices

Section 21 - MAIN HYDRAULIC SYSTEM

- Group 2160 - Hydraulic System

Section 31 - LOADER

- Group 3100 - Loader
- Group 3102 - Bucket
- Group 3115 - Control Linkages
- Group 3160 - Hydraulic System

Section 33 - BACKHOE

- Group 3302 - Bucket
- Group 3315 - Control Linkage
- Group 3340 - Frames
- Group 3360 - Hydraulic System



Thank you very much
for your reading.
Please click here
to get more information.