

T M

Technical Manual

**John Deere
450E Crawler
Bulldozer**

455E Crawler

PDF



DOWNLOAD



TM1330 (01OCT87)



Litho in U.S.A.

JOHN DEERE DEALERS

IMPORTANT: Please remove this page and route through your service department.

This is a complete revision for TM-1330, 450E Crawler Bulldozer and 455E Crawler Loader.

Binder and tabs from old manual may be saved and used with this bound manual.

The new pages are dated (Oct-87). Listed below is a brief explanation of "WHAT" was changed and "WHY" it was changed.

This manual was revised:

1. To include the correct art and story for steering linkage.
2. To include story to apply a small amount of heat to backhoe cylinder nut to oxidize the thread lock and sealer (medium strength).

T64;1330 DCSR 211087

450E CRAWLER BULLDOZER AND 455E CRAWLER LOADER TECHNICAL MANUAL TM-1330 (Oct-87)

SECTION AND GROUP CONTENTS

SECTION I - GENERAL INFORMATION

- Group I - Introduction and Safety Information
- Group II - General Specifications
- Group III - Torque Specifications Chart
for Cap Screws and Hydraulic Fittings
- Group IV - Lubrication

SECTION 01 - TRACKS

- Group 0130 - Track Systems
Track Chain, Track Frame, Track Carrier
Roller, Front Idler, Track Roller and Track
Adjuster

SECTION 02 - AXLES AND SUSPENSION SYSTEMS

- Group 0250 - Axle Shaft, Bearings, Reduction
Gears
Final Drive, Steering Clutch, Brake Band,
Steering Clutch Housing and Linkage

SECTION 03 - TRANSMISSION

- Group 0315 - Controls
- Group 0350 - Gears, Shafts, Bearings, and
H-L-R Clutch
Clutch Oil Pump, H-L-R Clutches, Control
Valve, Clutch Accumulator Valve, Clutch Oil
Manifold, Shift Valve, Transmission Oil Filter,
Shift Linkage, Neutral Start Switch and
Transmission Oil Cooler
- Group 0360 - Transmission Hydraulics (See Group
0350)

SECTION 04 - ENGINE—Continued

- Group 0400 - Removal and Installation
- Group 0401 - Crankshaft and Main Bearings
- Group 0402 - Camshaft and Valve Actuating
Means
- Group 0403 - Connecting Rods and Pistons
- Group 0404 - Cylinder Block (Liners)
- Group 0407 - Engine Oiling System
- Group 0409 - Cylinder Head and Valves
- Group 0410 - Exhaust Manifold
- Group 0413 - Fuel Injection System
- Group 0414 - Intake Manifold
- Group 0415 - Engine Balancer
- Group 0416 - Turbocharger
- Group 0417 - Water Pump
- Group 0418 - Thermostats, Housing and Piping
- Group 0419 - Engine Oil Cooler
- Group 0420 - Fuel Filter
- Group 0421 - Fuel Transfer Pump
- Group 0422 - Starting System
- Group 0433 - Flywheel, Housing and Fasteners

SECTION 05 - ENGINE AUXILIARY SYSTEMS

- Group 0505 - Cold Weather Starting Aids
- Group 0510 - Cooling Systems
- Group 0515 - Speed Controls
- Group 0560 - External Fuel Supply Systems

SECTION 7 - CLUTCH

- Group 0715 - Controls
- Group 0752 - Elements

Continued on next page

All information, illustrations and specifications contained in this technical manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

Copyright© 1987
DEERE & COMPANY
Moline, Illinois
All Rights Reserved
A JOHN DEERE ILLUSTRATION
Previous Edition
Copyright© 1986 Deere & Company
Copyright© 1985 Deere & Company

T64;1330 13 240987



Thank you very much
for your reading.
Please click here
to get more information.