




**NEW HOLLAND**

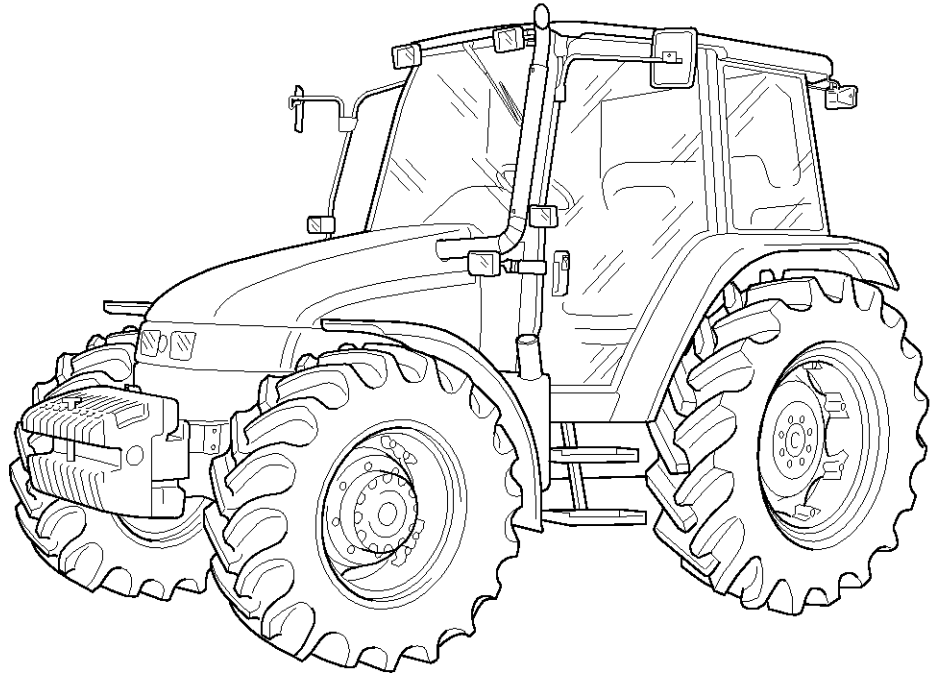

# TRACTORS

## TL70A - TL80A - TL90A - TL100A SERVICE MANUAL

### SECTIONS

<b>GENERAL GUIDELINES</b> .....	<b>00</b>
<b>ENGINE</b> .....	<b>10</b>
<b>CLUTCH</b> .....	<b>18</b>
<b>TRANSMISSION</b> .....	<b>21</b>
<b>DRIVE LINES</b> .....	<b>23</b>
<b>FRONT MECHANICAL TRANSMISSION</b> .....	<b>25</b>
<b>REAR MECHANICAL TRANSMISSION</b> .....	<b>27</b>
<b>POWER TAKE-OFF</b> .....	<b>31</b>
<b>BRAKES</b> .....	<b>33</b>
<b>HYDRAULIC SYSTEMS</b> .....	<b>35</b>
<b>STEERING</b> .....	<b>41</b>
<b>AXLE AND WHEELS</b> .....	<b>44</b>
<b>CAB AIR CONDITIONING SYSTEM</b> .....	<b>50</b>
<b>ELECTRICAL SYSTEM</b> .....	<b>55</b>
<b>PLATFORM, CAB, BODYWORK</b> .....	<b>90</b>

**PDF**  **DOWNLOAD** 

S E R V I C E

## INTRODUCTION

- ◇ *This manual is divided into sections identified by two-figure numbers and each section has independent page numbering.  
For easy reference, these sections have the same numbers and names as the Repairs Rate Book sections.*
- ◇ *The different sections can easily be found by consulting the table of contents on the following pages.*
- ◇ *The document number of the manual and the edition/update dates are given at the bottom of each page.*
- ◇ *Pages updated in the future will be identified by the same document number followed by a two-figure update number (e.g., 1<sup>st</sup> Update 603.54.511.01; 2<sup>nd</sup> Update 603.54.511.02; etc.) and by the corresponding issue date.  
These pages will be supplemented by a reprint of the updated contents page.*
- ◇ *The information contained in this manual was current on the date printed on each section. As NEW HOLLAND constantly improves its product range, some information may be out of date subsequent to modifications implemented for technical or commercial reasons, or to meet legal requirements in different countries.  
In the event of conflicting information, consult the NEW HOLLAND Sales and Service Departments.*

## IMPORTANT WARNINGS

- ◇ *All maintenance and repair work described in this manual must be performed exclusively by NEW HOLLAND service technicians, in strict accordance with the instructions given and using any specific tools necessary.*
- ◇ *Anyone performing the operations described herein without strictly following the instructions is personally responsible for any eventual injury or damage to property.*
- ◇ *The Manufacturer and all organisations belonging to the Manufacturer's distribution network, including but not restricted to national, regional or local distributors, will accept no responsibility for personal injury or damage to property caused by abnormal function of parts and/or components not approved by the Manufacturer, including those used for maintenance and/or repair of the product manufactured or marketed by the Manufacturer.  
In any case, the product manufactured or marketed by the Manufacturer is covered by no guarantee of any kind against personal injury or damage to property caused by abnormal function of parts and/or components not approved by the Manufacturer.*

TEXT AND ILLUSTRATIONS ARE THE PROPERTY  
OF CNH ITALIA S.p.A.



No part of the text or illustrations  
may be reproduced

PRINTED IN ITALY

**CNH ITALIA S.p.A. - Viale delle Nazioni, 55 - 41100 MODENA - Italy**  
Product Support - Technical Information  
Print No. **603.54.511.00** - 03 - 2006

**CONTENT VOLUME 1**

	Page	Date		Page	Date
<b>00 - GENERAL GUIDELINES</b>					
General instructions . . . . .	1-2	03-06	Checks and measurements - pistons . . . . .	86 to 89	03-06
Safety regulations . . . . .	3-4-5	03-06	Checks and measurements - camshaft, tappets and valves . . . . .	90 to 93	03-06
Consumables . . . . .	6	03-06	Checks and measurements - cylinder head . . . . .	94	03-06
<b>10 - ENGINE</b>					
Summary . . . . .	1	03-06	Functional testing on low engine oil pressure indicator . . . . .	95	03-06
General specifications . . . . .	2 to 4	03-06	Checks and measurements - cooling system . . . . .	96	03-06
Fuel system data . . . . .	5	03-06	Replacing crankshaft front seal . . . . .	97 to 99	03-06
Crankshaft and engine block data . . . . .	6	03-06	Replacing crankshaft rear seal . . . . .	100 to 102	03-06
Connecting rod data . . . . .	7	03-06	Adjusting tappet, valve and rocker arm clearance . . . . .	103 to 105	03-06
Piston data . . . . .	7-8	03-06	Removal-Installation - injectors . . . . .	106 to 108	03-06
Timing gear data . . . . .	8-9	03-06	Removal - Installation - Bosch injection pump . . . . .	109 to 113	03-06
Cylinder head data . . . . .	9-10	03-06	Bosch injection pump - timing . . . . .	114 to 118	03-06
Tightening Torques . . . . .	11-12	03-06	Bosch injection pump - air bleeding . . . . .	118	03-06
Tools . . . . .	13	03-06	Removal-Installation - coolant pump . . . . .	119-120	03-06
View of 4-cylinder engine mod. TL70A and TL80A . . . . .	14	03-06	Removal-Installation - thermostat valve . . . . .	121-122	03-06
View of 4-cylinder engine mod. TL90A and TL100A . . . . .	15	03-06	Removal-Installation - radiator . . . . .	123 to 128	03-06
Engine cooling and lubrication diagrams . . . . .	16-17	03-06	Coolant pump drive belt adjustment . . . . .	129 to 130	03-06
Component parts of cylinder head mod. TL70A and TL80A . . . . .	18	03-06	<b>18 - CLUTCH</b>		
Component parts of cylinder head mod. TL90A and TL100A . . . . .	19	03-06	Summary . . . . .	1	03-06
Component parts of additional counterweights . . . . .	20	03-06	Data . . . . .	2	03-06
Troubleshooting . . . . .	21 to 24	03-06	Tightening Torques . . . . .	3	03-06
Engine removal-installation . . . . .	25 to 44	03-06	Tools . . . . .	3	03-06
Engine disassembly-assembly . . . . .	45 to 78	03-06	Cross-sectional views . . . . .	4	03-06
Checks and measurements - cylinder block and liners . . . . .	79 to 81	03-06	Troubleshooting . . . . .	5	03-06
Checks and measurements - crankshaft, bearings and flywheel . . . . .	82 to 83	03-06	Checks and measurements - clutch . . . . .	6-7	03-06
Checks and measurements - connecting rods . . . . .	84 to 85	03-06	Adjustments - clutch pedal . . . . .	8	03-06
			Removal-Installation - clutch . . . . .	9 to 11	03-06
			Clutch Overhaul . . . . .	12 to 15	03-06



Thank you very much  
for your reading.  
Please click here  
to get more information.