


SHOP MANUAL

KUBOTA

Models L175-L210-L225-L225DT-L260

INDEX (By Starting Paragraph)

	L175	L210	L225	L225DT	L260
BRAKES					
Adjust	140	141	140	140	142
Overhaul	145	145	145	145	145
Remove and Reinstall	143	144	143	143	144
CLUTCH					
Adjust	89	90	89	89	90
Clutch Shaft	95	96	95	95	96
Overhaul	92	92	93	93	93
Remove and Reinstall	91	91	91	91	91
COOLING SYSTEM					
Radiator	76	76	76	76	76
Thermostat	77	77	77
Water Pump	78	78	79
DIESEL FUEL SYSTEM					
Filters	49	49	49	49	49
Glow Plugs	75	75	75	75	75
Injection Pump	51	55	51	51	58
Nozzles	64	64	64	64	64
DIFFERENTIAL					
Lock	127	129	127	127	131
Overhaul	126	126	126	126	126
Remove and Reinstall	119	121	119	119	123
ELECTRICAL SYSTEM					
Alternator and Regulator	82	...	82	82	...
Generator and Regulator	80	80
Starter	86	86	86	86	86
ENGINE					
Cam Followers	20	20	20	20	20
Camshaft	27	28	27	27	29
Compression Release	13	13	13	13	14
Connecting Rods and Bearings	37	37	37	37	37
Crankshaft and Bearings	38	39	38	38	40
Cylinder Head	12	12	12	12	12
Cylinder Sleeves	35	35	35	35	36
Engine Removal	11	11	11	11	11
Flywheel	42	42	42	42	43
Injection Timing	51	51	51	51	58
Main Bearings	38	39	38	38	40
Oil Pressure	48	48	48	48	48
Oil Pump	44	45	44	44	47
Pistons and Rings	32	33	32	32	33
Piston Pins	34	34	34	34	34
Piston Removal	30	31	30	30	31
Rocker Arms	19	19	19	19	19
Timing Gear Cover	22	22	22	22	22
Timing Gears	23	24	23	23	25
Valves and Seats	16	16	16	16	16
Valve Guides	17	17	17	17	17
Valve Springs	18	18	18	18	18
Valve Tappet Gap	15	15	15	15	15
Valve Timing	21	21	21	21	21
FINAL DRIVE					
Overhaul	134	136	134	134	138
Remove and Reinstall	133	133	133	133	133

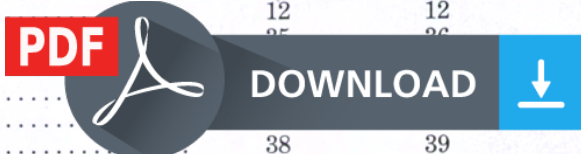

INDEX (Cont.)

	L175	L210	L225	L225DT	L260
FRONT SYSTEM (Except FWD)					
Axle	1	1	1	...	1
Steering Gear	4	4	4	...	4
Steering Knuckles	3	3	3	...	3
Tie Rods and Toe-in	2	2	2	...	2
FRONT-WHEEL DRIVE					
Front Axle	5	...
Outer Drive Assembly	6	...
Outer Drive Housing, King Pins, Axle Shafts and Spindle Housing	7	...
Differential and Bevel Gear Assembly	8	...
Transfer case	9	...
Steering Gear	10	...
HYDRAULIC SYSTEM					
Adjustment	153	155	153	153	157
Control Valve	164	165	164	164	167
Fluid and Filters	150	151	150	150	152
Pump	159	162	159	159	162
Rockshaft	169	171	169	169	173
POWER TAKE-OFF	146	148	146	146	149
REAR AXLE	135	137	135	135	139
TRANSMISSION					
Overhaul	99	108	99	99	115
Remove and Reinstall	97	106	97	97	113

DUAL DIMENSIONS

This service manual provides specifications in both the U.S. Customary and Metric (SI) systems of measurement. The first specification is given in the measuring system perceived by us to be the preferred system when servicing a particular component, while the second specification (given in parenthesis) is the converted measurement. For instance, a specification of "0.011 inch (0.28 mm)" would indicate that we feel the preferred measurement, in this instance, is the U.S. system of measurement and the metric equivalent of 0.011 inch is 0.28 mm.

CONDENSED SERVICE DATA

GENERAL	L175	L210	L225	L225DT	L260
Engine Make	Own	Own	Own	Own	Own
Engine Model	Z750-A	Z1100A	D1100A	D1100A	Z1300
Number of Cylinders	2	2	3	3	2
Bore (mm)	76	88	76	76	90
(Inches)	3	3-15/32	3	3	3-17/32
Stroke (mm)	82	88	82	82	100
(Inches)	3-7/32	3-15/32	3-7/32	3-7/32	3-15/16
Displacement (cc)	743	1070	1115	1115	1272
(Cubic Inches)	45.3	65.3	68.3	68.3	77.7
Compression Ratio	21:1	20:1	21:1	21:1	21.5:1
TUNE-UP					
Valve Tappet Gap (Cold) (mm)	0.18-0.22	0.20-0.25	0.18-0.22	0.18-0.22	0.20-0.25
(Inch)	0.007-0.009	0.008-0.010	0.007-0.009	0.007-0.009	0.008-0.010
Injection Timing (BTDC)	25°	24°	25°	25°	20°
Timing Mark Location	Flywheel	Flywheel	Flywheel	Flywheel	Flywheel
Injection Pressure (MPa)	13.8	13.8	13.8	13.8	11.73
(PSI)	2000	2000	2000	2000	1700



Thank you very much
for your reading.
Please click here
to get more information.