


# John Deere 748H (SN.-630435) Grapple Skidder Service Repair Technical Manual (TM10288)

6095MC, 6095RC,

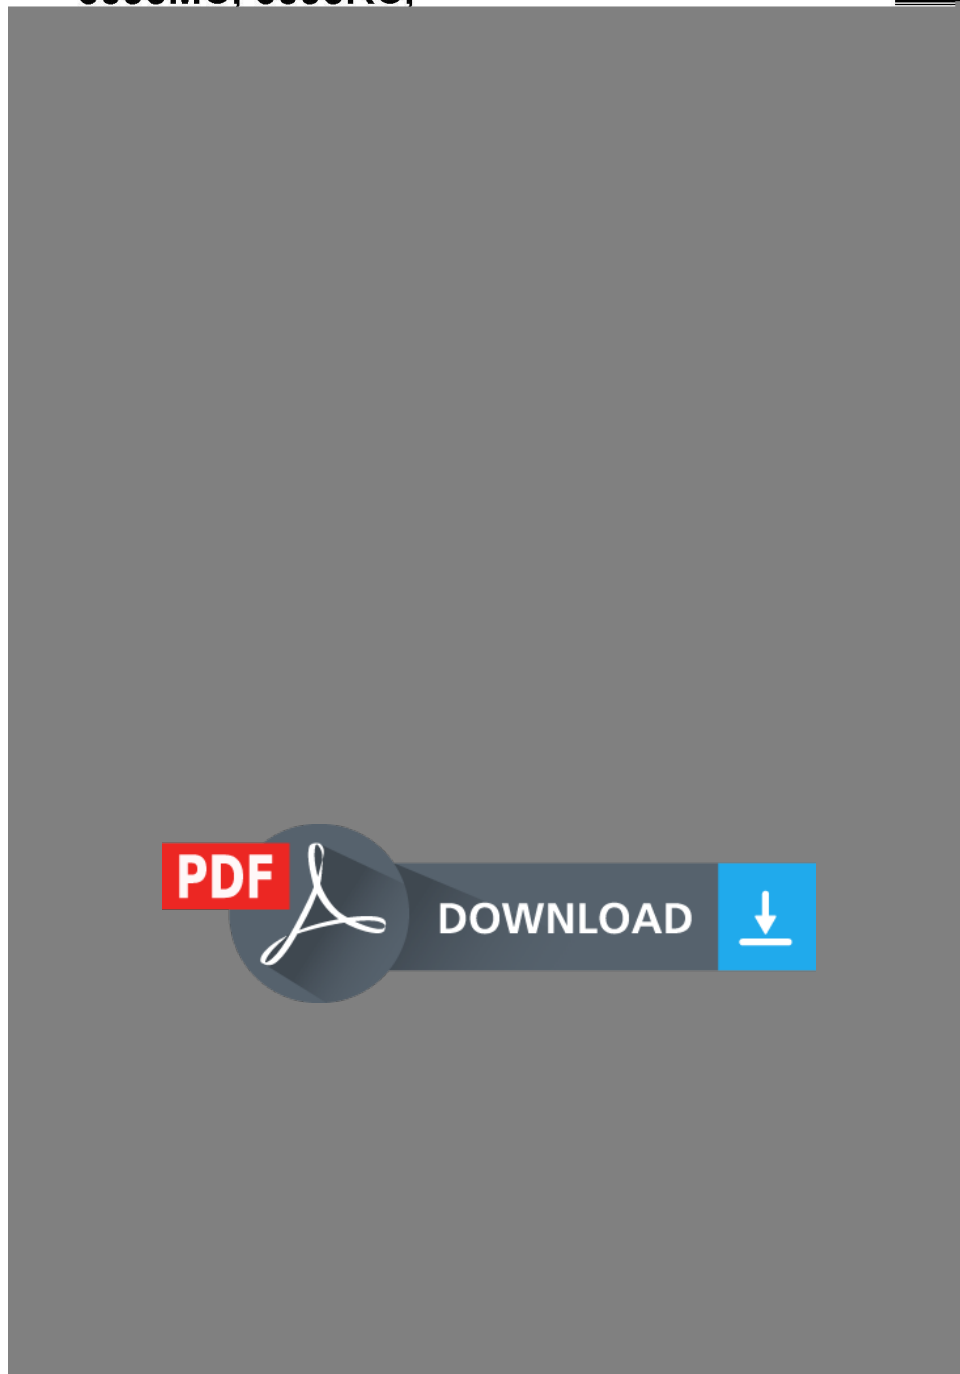

**Covers:** 748H

**Type:** Service Manual

**Language:** English

**Pages:** 491

**Format:** PDF

**Features:** Bookmarked, searchable, printable

**Compatibility:** Windows/Mac/Tablet/Mobile

This service manual contains important information for the maintenance, troubleshooting and servicing of the **John Deere 748H (SN.-630435) Grapple Skidder Service Repair Technical Manual (TM10288)**

In this manual you will find detailed specifications, illustrations, schematics, diagrams and step-by-step procedures to properly service and diagnose the machine to the manufacturer's standards.


**Contents:**

- General Information
- Specifications
- Serial Number Location
- Engine Specifications
- Engine Diagnostics
- Engine Tests and Adjustments
- Engine Repair
- Power Train
- Transmission
- Axles
- Differential
- PTO
- Hydraulic System
- Electrical System
- Electrical Tests and Diagnostics
- Wiring Diagram / Schematic
- Ignition and Charging
- Steering
- Brakes
- Wheels
- Operator's Platform
- Body Panels
- Disassembly and Assembly
- Diagnostics, Tests and Adjustments
- Troubleshooting
- and much more...

Please note this manual is in **downloadable PDF format only**. If you have any questions about this product or would like to request sample pages, please contact us and reference the product name or SKU.

## Align Drill Shaft Couplers—1795 51 cm (20 in.) Row


[1] -

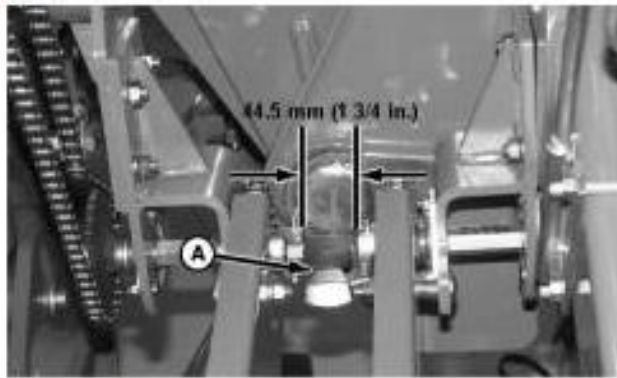


### LEGEND:

- A Drive Couplers
- B Cotter Pins
- C Washers

### Flat Surfaces

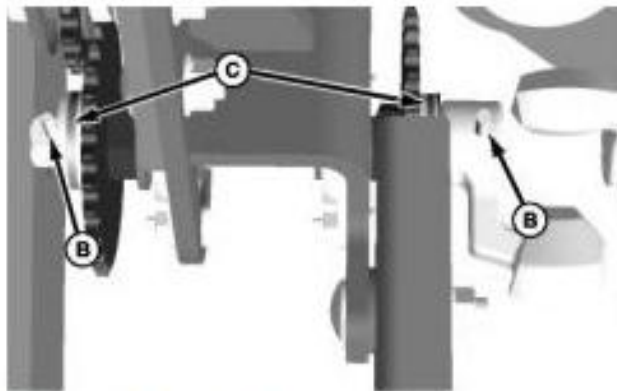

### Center Frame Coupler

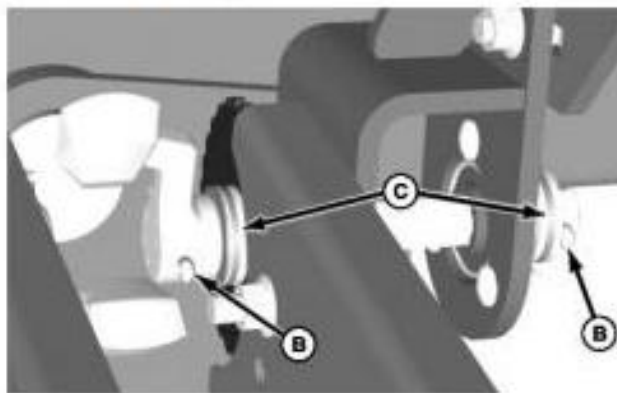

### Wing Coupler

Unfold and lower planter to ground, and pull forward slightly to engage drives.

[2] - If surfaces do not align from side to side, proceed as follows.

- a. Measure distance between coupler bases.
- b. If coupler bases are not within 3 mm (1/8 in.) of specification, remove cotter pins (B).

Item	Measurement	Specification
Coupler Separation (20 in. Machines)	Distance	44.5 mm (1-3/4 in.)

- c. Transfer washers (C), as needed, from one side of shaft to the other until drive couplers (A) are within specification.
- d. Install cotter pins.

[3] -



Thank you very much  
for your reading.  
Please click here  
to get more information.