

John Deere 7200J, 7215J and 7230J Tractors Service Repair Technical Manual (TM805119)

7200J, 7215J & 7230J
Tractors Repair



JOHN HARE



COLLECTION

REPAIR TECHNICAL MANUAL
7200J, 7215J & 7230J Tractors

TM805119 01DEC18 (ENGLISH)



John Deere Montenegro

Covers: 7200J,7215J,7230J

Type: Service Manual

Language: English

Pages: 595

Format: PDF

Features: Bookmarked, searchable, printable

Compatibility: Windows/Mac/Tablet/Mobile

This service manual contains important information for the maintenance, troubleshooting and servicing of the **John Deere 7200J, 7215J and 7230J Tractors Service Repair Technical Manual (TM805119)**

In this manual you will find detailed specifications, illustrations, schematics, diagrams and step-by-step procedures to properly service and diagnose the machine to the manufacturer's standards.

Contents:

- General Information
- Specifications
- Serial Number Location
- Engine Specifications
- Engine Diagnostics
- Engine Tests and Adjustments
- Engine Repair
- Power Train
- Transmission
- Axles
- Differential
- PTO
- Hydraulic System
- Electrical System
- Electrical Tests and Diagnostics
- Wiring Diagram / Schematic
- Ignition and Charging
- Steering
- Brakes
- Wheels
- Operator's Platform
- Body Panels
- Disassembly and Assembly
- Diagnostics, Tests and Adjustments
- Troubleshooting
- and much more...

Please note this manual is in **downloadable PDF format only**. If you have any questions about this product or would like to request sample pages, please contact us and reference the product name or SKU.

Repair Reverse Brake

1. Remove reverse brake. (See [Remove Reverse Brake](#) in this Group.)
2. Remove brake disks (A).



RXA0066508-UN: Removing Reverse Brake Disks

LEGEND:

A-Reverse Brake Disks

3. Remove pressure plate (A) and springs (B).



RXA0066509-UN: Removing Pressure Plate and Springs

LEGEND:

A-Pressure Plate

B-Springs

4. Remove piston (A).




RXA0066510-UN: Removing Reverse Brake Piston

LEGEND:

A-Reverse Brake Piston

5. Repair or assemble reverse brake as required. (See [Exploded View—Reverse Brake](#) in this Group.)
6. Check the bushing (A) in the reverse brake housing. Replace, if necessary.

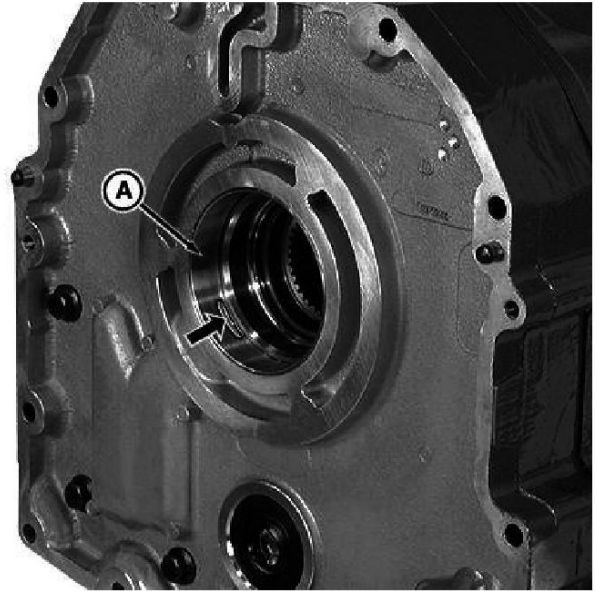

RXA0066512-UN: Installing Bushing

LEGEND:

A-Bushing

7. When installing, turn bushing (A) so that its hole is aligned with the hole in housing (see arrow).
8. NOTE:

Mandrel and driver disks are in D01045AA Disk Set.

Press in new bushing (A) until flush with the surface on the side of the piston housing. Use a mandrel and 93.7 mm (3-11/16 in) and 100 mm (3-15/16 in) dia. driver disk.

9. Install Reverse Brake. (See [Install Reverse Brake](#) in this Group.)

OJ90600,000079D-19-20160725



Thank you very much
for your reading.
Please click here
to get more information.