
### PowerTech™ Plus 4.5L and 6.8L Diesel Engines Level 14 Electronic Fuel System With Denso HPCR



# COMPONENT TECHNICAL MANUAL PowerTech Plus 4.5 L and 6.8 L Diesel Engines—Level 14 Electronic Fuel System with Denso HPCR

CTM320 17JUL09 (ENGLISH)

#### For complete service information also see:

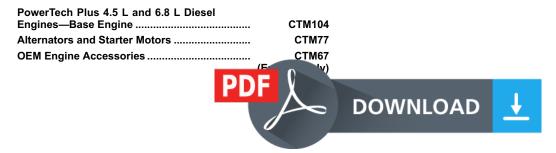

CTM320

#### Introduction

#### **Forward**

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

This manual (CTM320) covers only Level 14 Electronic Fuel System with the Denso High Pressure Common Rail (HPCR). It is one of six volumes on 4.5 L and 6.8 L engines. The following companion manual covers the base engine and mechanical fuel system. Each manual covers repair, operation, and diagnostics.

#### • CTM104—Base Engine

Other manuals will be added in the future to provide additional information on electronic fuel systems as needed.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.

This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Use this component technical manual in conjunction with the machine technical manual. An application listing in Section 01, Group 001 identifies product-model/component type-model relationship. See the machine technical manual for information on component removal and installation, and gaining access to the components.

Information is organized in sections and groups for the various components requiring service instruction. At the beginning of each group are summaries of the up coming group.

Before beginning repair on an engine, clean the engine.

This manual contains SI Metric units of measure followed immediately by the U.S. customary units of measure. Most hardware on these engines are metric sized.

Some components of this engine may be serviced without removing the engine from the machine. Refer to the specific machine technical manual for information on components that can be serviced without removing the engine from the machine and for engine removal and installation procedures.

Read each block of material completely before performing service to check for differences in procedures or specifications. Follow only the procedures that apply to the engine model number you are working on. If only one procedure is given, that procedure applies to all the engines in the manual.

CALIFORNIA PROPOSITION 65 WARNING: Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

RG41183,00000EA -19-15OCT08-1/1

#### **Record of Changes**

Publication and Translation Date				
CTM 320 12/04/2008				
Section / Group	Block Title	Comment	Update Date	
05/170	Repair and Adjustment Tools	Added Cylinder Leak-Down Test Kit	3/17/2009	
04/150	Observable Diagnostic	Added Cylinder Leak-Down Test Kit	3/17/2009	
04/160	Trouble Code Diagnostics and Tests	Added 002004.09 Code	3/20/2009	
06/200	Electronic Engine Control Repair and Adjustment Specifications	Corrected Torque Value for EGR Temperature Sensor	4/09/2009	

RG40049,00001CE -19-09APR09-1/1

#### **Contents**

#### Section 01—General

Group 000—Safety

Group 001—Engine Identification

Group 002—Fuels, Lubricants, and Coolant

Group 003—Fuel System Identification

#### **Section 02—Repair and Adjustments**

Group 090—Electronic Fuel System Repair and Adjustments

Group 100-Electronic Air System Repair and Adjustment

Group 110—Electronic Engine Control Repair and Adjustment

#### Section 03—Theory Of Operation

Group 130—Electronic Fuel System Operation Group 135—Electronic Air System Operation Group 140—Electronic Control System Operation

#### Section 04—Diagnostics

Group 150—Observable Diagnostics and Tests

Group 160—Trouble Code Diagnostics and Tests

#### Section 05—Tools

Group 170—Electronic Fuel/Control System Repair Tools and Other Material

Group 180—Diagnostic Service Tools


#### Section 06—Specifications

Group 200—Repair Specifications

Group 210—Diagnostic Specifications

Original Instructions. All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

> COPYRIGHT © 2009
> DEERE & COMPANY
> Moline, Illinois
> All rights reserved.
> A John Deere ILLUSTRUCTION ® Manual Previous Editions Copyright © 2005, 2006, 2007, 2008

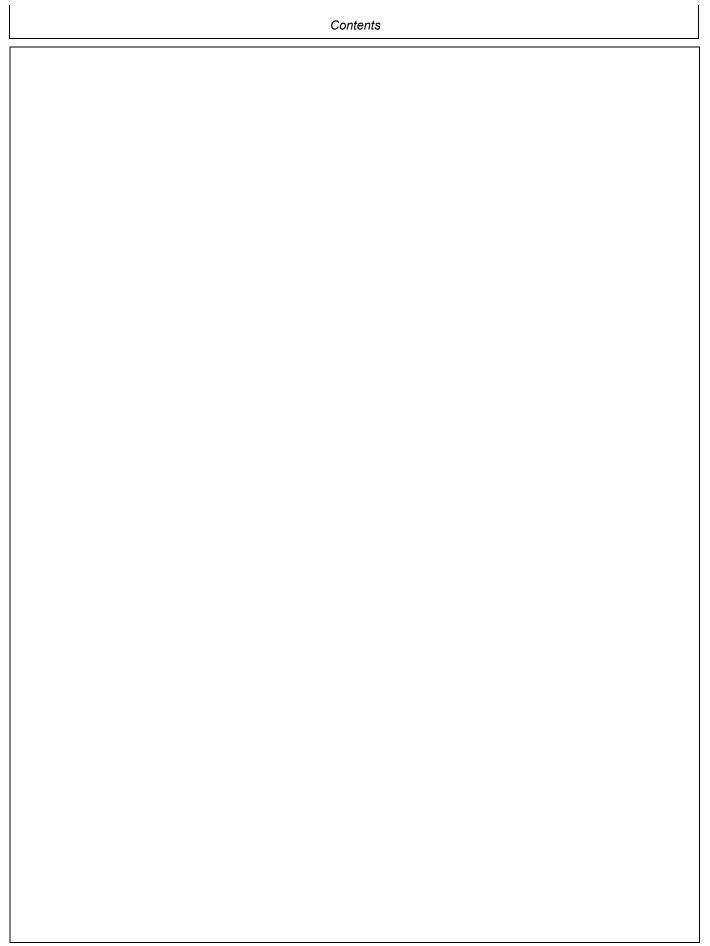

## Section 01 General

#### **Contents**

	Page		Page
Group 000—Safety	01-000-1	High Pressure Fuel System Type	01-003-2
Group 001—Engine Identification		Fuel Lubricating Dosing	
Engine Serial Number Plate		System—Type 1	01-003-3
Information	01-001-1		
OEM Engine Option Code Label			
Information Relative to Emissions			
Regulations	01_001_3		
Emissions Control System	0 1-00 1-3		
Certification Label	01_001_3		
Engine Application Charts			
Engine Application Charts	0 1-00 1-4		
Group 002—Fuels, Lubricants, and	Coolant		
Diesel Fuel			
Biodiesel Fuel			
Minimizing the Effect of Cold			
Weather on Diesel Engines	01-002-3		
Handling and Storing Diesel Fuel			
Lubricity of Diesel Fuel			
Testing Diesel Fuel			
Diesel Engine Oil			
Diesel Engine Break-In Oil			
Oil Filters			
Grease	01-002-6		
Alternative and Synthetic			
Lubricants			
Lubricant Storage			
Mixing of Lubricants	01-002-7		
Heavy Duty Diesel Engine			
Coolant			
Supplemental Coolant Additives	01-002-8		
Operating in Warm Temperature			
Climates	01-002-8		
Additional Information About			
Diesel Engine Coolants and			
John Deere LIQUID COOLANT			
CONDITIONER	01-002-9		
Diesel Engine Coolant			
Testing Diesel Engine Coolant			
Drain Intervals for Diesel Engine			
Coolant	01-002-11		
Engine Oil and Filter Service	01 002 11		
Intervals	01-002-11		
THE VAIC	01 002 11		
Group 003—Fuel System Identificat	tion		
Low Pressure Fuel System Type			
1	01-003-1		
Low Pressure Fuel System Type			
2	01-003-1		
Low Pressure Fuel System Type	01 000-1		
	01 002 1		
3 High Pressure Fuel System Type	0 1-003-1		
	01 002 2		
1	0 1-003-2		



Thank you very much for your reading.

Please click here to get more information.