

331G and 333G Comact Track Loader Operation and Test

(PIN: 1T0331G__F300253—;
PIN: 1T0333G__F300253—)



JOHN HARE



COLLECTION

OPERATION & TEST TECHNICAL MANUAL 331G and 333G Comact Track Loader (PIN: 1T0331G__F300253—; PIN: 1T0333G__F300253—)

TM14062X19 01DEC18 (ENGLISH)

For complete service information also see:

331G and 333G Comact Track Loader Operators Manual.....	OMT362754X19
4TNV94FHT Diesel Engines (Final Tier 4 Platform).....	ctm136419
331G and 333G Comact Track Loader Repair.....	TM14064X19
Hydraulic Cylinders.....	ctm120519



Worldwide Construction and
Forestry Division

Foreword

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.



CAUTION:

This is the safety-alert symbol. When this symbol is seen on the machine or in this manual, be alert for the potential of personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components.

Operation and test sections help to quickly identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

MM16284,0001A38-19-20151201

Manual Identification—READ THIS FIRST!

IMPORTANT:


Use only supporting manuals designated for the specific machine. If incorrect manual is chosen, improper service may occur. Verify product identification number (PIN) when choosing the correct manual.

Choosing the Correct Supporting Manuals

John Deere skid steers are available in different machine configurations based on the various markets into which they are sold. Different supporting manuals exist for different machine configurations.

When necessary, product identification numbers are listed on the front covers of skid steer manuals. These numbers are used to identify the correct supporting manual for the machine.

Product Identification Number

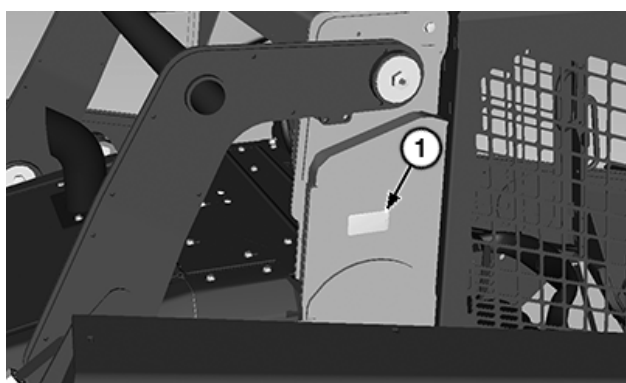

TX1215127-UN: PIN Plate Location



TX1216544-UN: Example of PIN Plate

LEGEND:

1-PIN Plate

2-17-Character PIN

The product identification number (PIN) plate (1) is located on the right side of machine behind the cab. Each machine has a 17-character PIN (2) shown on PIN plate.

The PIN identifies the producing factory, machine model number, machine option, year of manufacture, engine emission level, and machine serial number.

The following is an example for a machine that meets Final Tier 4 and Stage IV emission levels:

17-Character PIN Examples																
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
1	T	0	3	3	1	G	-	-	-	F	0	0	0	0	0	1

(1—3) World Code:Identifies location where machine is manufactured.

1T0.....	World Code (manufacturing location)
1DW.....	Davenport Works
1T8.....	Thibodaux Works
1T0.....	Dubuque Works
1FF.....	Deere—Hitachi (Kernersville, NC, USA)
1F9.....	Deere—Hitachi (Indaiatuba, Sao Paulo, Brazil)

(4—8) Machine Model and Series Identifier:Identifies model number and series.

331G.....	Machine Model and Series Identifier
333G.....	Machine Model and Series Identifier

NOTE:

Characters 7—8 identify series and major machine configuration options. These characters will change from one machine to another.

.....	Machine Option Code
A.....	Single Speed
B.....	2-Speed
E.....	Single Speed High Flow
F.....	2-Speed High Flow
J.....	Single Speed Electrohydraulic (EH)
K.....	2-Speed Electrohydraulic (EH)
L.....	Single Speed High Flow Electrohydraulic (EH)
M.....	2-Speed High Flow Electrohydraulic (EH)

(9) Check Letter:This is a random character assigned by the factory. This is not used in machine identification.

.....	Check Letter (variable)
-------	--------------------------------

(10) Manufacturing Year Code:Identifies year of machine manufacture.

.....	Manufacturing Year Code (variable)
D.....	2013
E.....	2014
F.....	2015
G.....	2016
H.....	2017

(11) Engine Emission Code:Represents engine emission certification.

F.....	Engine Emission Code
C.....	Tier 2 and Stage II
D.....	Tier 3 and Stage III A
E.....	Interim Tier 4 and Stage III B
F.....	Final Tier 4 and Stage IV
G.....	Interim Tier 4 and Stage III A (19-56 kW)
H.....	Final Tier 4 and Stage III A (19-37 kW)
J.....	Final Tier 4 and Stage III B (37-56 kW)
K.....	Final Tier 4 (8-19 kW)

(12—17) Machine Serial Number:Identifies machine serial number. This character will change from one machine to another.

000001.....	Machine Serial Number
-------------	------------------------------

Section 9000 - General Information

[Group 01 - Safety](#)

Section 9001 - Diagnostics

[Group 05 - Dosing Control Unit \(DCU\) Diagnostic](#)

[Trouble Codes](#)

[Group 10 - Engine Control Unit \(ECU\) Diagnostic](#)

[Trouble Codes](#)

[Group 20 - Engagement and Monitor Unit \(EMU\)](#)

[Diagnostic Trouble Codes](#)

[Group 30 - Hydraulic Control Unit \(HCU\) Diagnostic](#)

[Trouble Codes](#)

[Group 40 - Left Joystick Controller \(JSL\) Diagnostic](#)

[Trouble Codes](#)

[Group 50 - Right Joystick Controller \(JSR\) Diagnostic](#)

[Trouble Codes](#)

[Group 60 - Sealed Switch Module \(SSM\) Diagnostic](#)

[Trouble Codes](#)

[Group 70 - Vehicle Control Unit \(VCU\) Diagnostic](#)

[Trouble Codes](#)

[Group 80 - Rear Camera Display \(VC1\) Diagnostic](#)

[Trouble Codes](#)

Section 9005 - Operational Checkout Procedure

[Group 10 - Operational Checkout Procedure](#)

Section 9010 - Engine

[Group 05 - Theory of Operation](#)

[Group 10 - System Diagrams](#)

[Group 15 - Diagnostic Information](#)

[Group 20 - Adjustments](#)

[Group 25 - Tests](#)

Section 9015 - Electrical System

[Group 05 - Theory of Operation](#)

[Group 10 - System Diagrams](#)

[Group 15 - Diagnostic Information](#)

[Group 16 - Monitor Operation](#)

[Group 17 - Diagnostic Test Box](#)

[Group 20 - Adjustments](#)

[Group 25 - Tests](#)

Section 9020 - Power Train

[Group 05 - Theory of Operation](#)

[Group 10 - System Diagrams](#)

[Group 15 - Diagnostic Information](#)

[Group 20 - Adjustments](#)

Section 9025 - Hydraulic System

[Group 05 - Theory of Operation](#)

[Group 10 - System Diagrams](#)

[Group 15 - Diagnostic Information](#)

[Group 20 - Adjustments](#)

[Group 25 - Tests](#)

Section 9026 - Hydrostatic System

[Group 05 - Theory of Operation](#)

[Group 10 - System Diagrams](#)

[Group 15 - Diagnostic Information](#)

[Group 25 - Tests](#)

Section 9031 - Heating and Air Conditioning

[Group 05 - Theory of Operation](#)

[Group 10 - System Diagrams](#)

[Group 15 - Diagnostic Information](#)

[Group 25 - Tests](#)

Section 9900 - Dealer Fabricated Tools

[Group 99 - Dealer Fabricated Tools](#)

Section 9000 General Information

Contents

	Page		Page
Group 01 - Safety		<u>Use Steps and Handholds Correctly</u>	<u>9000-01-7</u>
<u>Recognize Safety Information</u>	<u>9000-01-1</u>	<u>Start Only From Operator's Seat</u>	<u>9000-01-8</u>
<u>Follow Safety Instructions</u>	<u>9000-01-1</u>	<u>Use and Maintain Seat Belt</u>	<u>9000-01-8</u>
<u>Operate Only If Qualified</u>	<u>9000-01-1</u>	<u>Prevent Unintended Machine Movement</u>	<u>9000-01-8</u>
<u>Wear Protective Equipment</u>	<u>9000-01-2</u>	<u>Avoid Work Site Hazards</u>	<u>9000-01-9</u>
<u>Avoid Unauthorized Machine Modifications</u>	<u>9000-01-2</u>	<u>Keep Riders Off Machine</u>	<u>9000-01-9</u>
<u>Inspect Machine</u>	<u>9000-01-2</u>	<u>Avoid Backover Accidents</u>	<u>9000-01-9</u>
<u>Stay Clear of Moving Parts</u>	<u>9000-01-2</u>	<u>Avoid Machine Tip Over</u>	<u>9000-01-10</u>
<u>Avoid High - Pressure Fluids</u>	<u>9000-01-3</u>	<u>Operating On Slopes</u>	<u>9000-01-10</u>
<u>Avoid High - Pressure Oils</u>	<u>9000-01-3</u>	<u>Operating or Traveling On Public Roads</u>	<u>9000-01-10</u>
<u>Work In Ventilated Area</u>	<u>9000-01-3</u>	<u>Inspect and Maintain ROPS</u>	<u>9000-01-10</u>
<u>Avoid Static Electricity Risk When Refueling</u>	<u>9000-01-4</u>	<u>Travel Safely</u>	<u>9000-01-11</u>
<u>Prevent Fires</u>	<u>9000-01-4</u>	<u>Prevent Acid Burns</u>	<u>9000-01-11</u>
<u>In Case of Machine Fire</u>	<u>9000-01-5</u>	<u>Add and Operate Attachments Safely</u>	<u>9000-01-11</u>
<u>Prevent Battery Explosions</u>	<u>9000-01-5</u>	<u>Park and Prepare for Service Safely</u>	<u>9000-01-12</u>
<u>Handle Chemical Products Safely</u>	<u>9000-01-5</u>	<u>Service Cooling System Safely</u>	<u>9000-01-12</u>
<u>Handle Starting Fluid Safely</u>	<u>9000-01-6</u>	<u>Remove Paint Before Welding or Heating</u>	<u>9000-01-12</u>
<u>Decommissioning - Proper Recycling and Disposal of Fluids and Components</u>	<u>9000-01-6</u>	<u>Make Welding Repairs Safely</u>	<u>9000-01-13</u>
<u>Exhaust Filter Ash Handling and Disposal</u>	<u>9000-01-6</u>	<u>Drive Metal Pins Safely</u>	<u>9000-01-13</u>
<u>Prepare for Emergencies</u>	<u>9000-01-7</u>	<u>Service Tires Safely</u>	<u>9000-01-13</u>
<u>Clean Debris from Machine</u>	<u>9000-01-7</u>	<u>Handle Cab Door Safely - If Equipped</u>	<u>9000-01-14</u>
<u>Add Cab Guarding for Special Uses</u>	<u>9000-01-7</u>	<u>Clean Exhaust Filter Safely</u>	<u>9000-01-14</u>



Thank you very much
for your reading.
Please click here
to get more information.