KOMATSU PW150-1 Wheeled Excavators Service Repair Workshop Manual[SEBM020E0104]

SHOP MANUAL

KOMATSU

PW150-1

MACHINE MODEL	SERIAL No.
PW150-1	**1001 and up**

- This shop manual may contain attachments and optional equipment that are not available in your area. Please consult your local Komatsu distributor for those items you may require. Materials and specifications are subjet to change without notice.

- PW-150-1 mounts the 6D95L-1 engine.
  For details of engine, see the 95 Series Engine Shop Manual.

Printed in Japan
08-91(03)03521

CONTENTS

No. of page

01 GENERAL 01-1

10 ENGINE

11 STRUCTURE AND FUNCTION 11-1
12 TESTING AND ADJUSTING 12-1
13 DISASSEMBLY AND ASSEMBLY 13-1

20 POWER TRAIN

21 STRUCTURE AND FUNCTION 21-1
22 TESTING AND ADJUSTING ..... See 62 TESTING AND ADJUSTING
23 DISASSEMBLY AND ASSEMBLY 23-1
24 MAINTENANCE STANDARD 24-1

40 STEERING SYSTEM

41 STRUCTURE AND FUNCTION 41-1
42 TESTING AND ADJUSTING 42-1
43 DISASSEMBLY AND ASSEMBLY 43-1
44 MAINTENANCE STANDARD 44-1

50 AIR SYSTEM

51 STRUCTURE AND FUNCTION 51-1

60 HYDRAULIC SYSTEM

61 STRUCTURE AND FUNCTION 61-1
62 TESTING AND ADJUSTING 62-1
63 DISASSEMBLY AND ASSEMBLY 63-1
64 MAINTENANCE STANDARD 64-1

70 WORK EQUIPMENT

71 STRUCTURE AND FUNCTION 71-1
73 DISASSEMBLY AND ASSEMBLY 73-1
74 MAINTENANCE STANDARD 74-1

80 ELECTRIC AND ELECTRONIC SYSTEM

81 STRUCTURE AND FUNCTION 81-1

90 OTHERS 91-1

3. Air cleaner and radiator hoses
1) Disconnect air cleaner hose (5).
2) Disconnect radiator inlet hose (6).

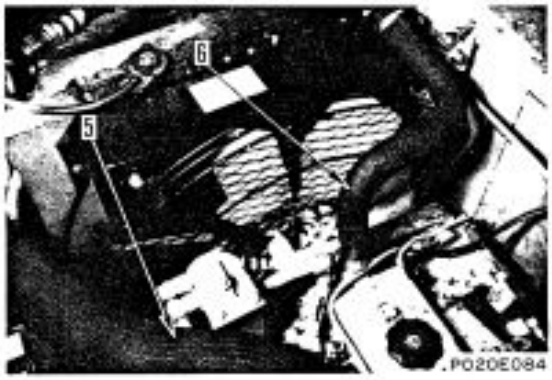

4. Fan guard
Remove fan guard (7).

5. Fan
Remove fan (8).

6. Air compressor hose
1) Disconnect air compressor outlet hose (9).
2) Disconnect unloader hose (10).

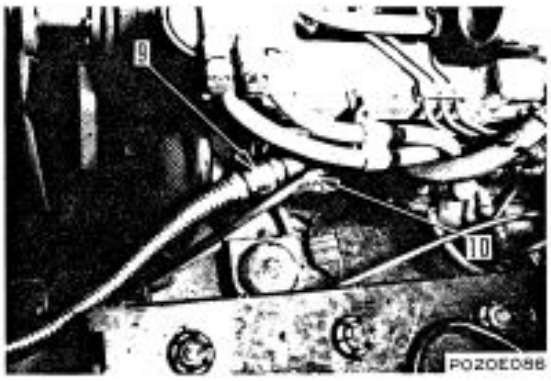

7. Hose
1) Disconnect heater hose (11).
2) Disconnect spill pipe (13).
3) Disconnect radiator outlet hose (14).

8. Wiring and cable
1) Disconnect water temperature gauge wiring (12).
2) Disconnect tachometer cable (15).

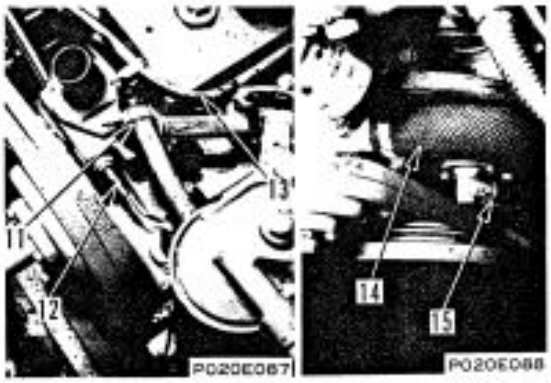

PDF DOWNLOAD

Thank you very much
for your reading.
Please click here
to get more information.