

# John Deere 2656GLC (SN. F266001-) Log Loader Service Repair Technical Manual (TM14038X19)

## 2656GLC Log Loader Repair

(PIN: 1FF2656G\_\_F266001—)



JOHN HARE



COLLECTION

### REPAIR TECHNICAL MANUAL

2656GLC Log Loader (PIN: 1FF2656G\_\_F266001—)

TM14038X19 01DEC18 (ENGLISH)

For complete service information also see:

2656GLC Log Loader Operators Manual ..... OMT388072X19  
2656GLC Log Loader Operation and Test ..... TM14037X19  
PowerTech 6068 OEM Diesel Engines (Final Tier 4/Stage  
IV platform) Level 33 ECU ..... dm120019



Worldwide Construction and  
Forestry Division

Covers: 2656GLC,1FF2656G\_\_,F266001 (7 icons)

**Type:** Service Manual

**Language:** English

**Pages:** 391

**Format:** PDF

**Features:** Bookmarked, searchable, printable

**Compatibility:** Windows/Mac/Tablet/Mobile

This service manual contains important information for the maintenance, troubleshooting and servicing of the **John Deere 2656GLC (SN. F266001-) Log Loader Service Repair Technical Manual (TM14038X19)**

In this manual you will find detailed specifications, illustrations, schematics, diagrams and step-by-step procedures to properly service and diagnose the machine to the manufacturer's standards.

**Contents:**

- General Information
- Specifications
- Serial Number Location
- Engine Specifications
- Engine Diagnostics
- Engine Tests and Adjustments
- Engine Repair
- Power Train
- Transmission
- Axles
- Differential
- PTO
- Hydraulic System
- Electrical System
- Electrical Tests and Diagnostics
- Wiring Diagram / Schematic
- Ignition and Charging
- Steering
- Brakes
- Wheels
- Operator's Platform
- Body Panels
- Disassembly and Assembly
- Diagnostics, Tests and Adjustments
- Troubleshooting
- and much more...

Please note this manual is in **downloadable PDF format only**. If you have any questions about this product or would like to request sample pages, please contact us and reference the product name or SKU.

## Track Chain Repair to Replace Broken Part

NOTE:


This procedure is to address a broken track pin or broken track link.

### **Broken Track Pin Replacement**

1. Remove three track shoes surrounding damaged area. [See Track Shoe Remove and Install](#). (Group 0130.)

2. NOTE:

All track pins, bushings, and links will be discarded and replaced with new parts.

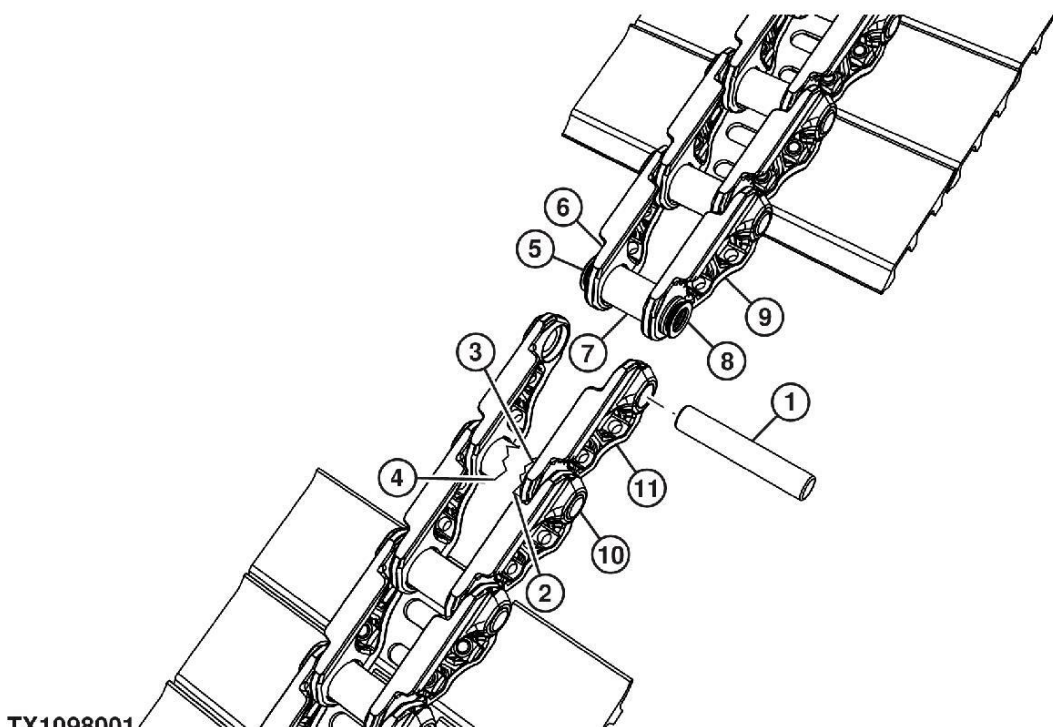

**TX1098001**

TX1098001-UN: Track Pin

LEGEND:

1-Broken Track Pin  
2-Bushing  
3-Cut Point  
4-Cut Point  
5-Grind Point  
6-Track Link

7-Bushing  
8-Grind Point  
9-Track Link  
10-Track Pin  
11-Track Link Assembly

Remove broken track pin (1).

**IMPORTANT:**

3. **Avoid damage to good parts. Use care when operating cutting torch.**

Cut bushing (2) and pin at cut points (3 and 4).



Thank you very much  
for your reading.  
Please click here  
to get more information.