


John Deere W235 Self-Propelled Draper Hay&Forage Windrower Service Repair Technical Manual (TM130119)


Section 10 - GENERAL

Group 10: General Information

Dimensions

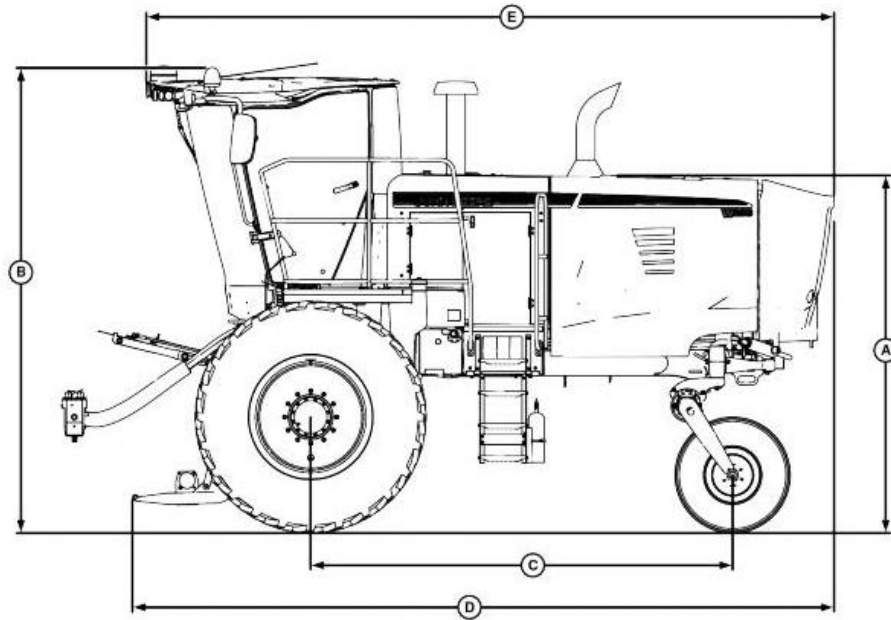

Side Profile

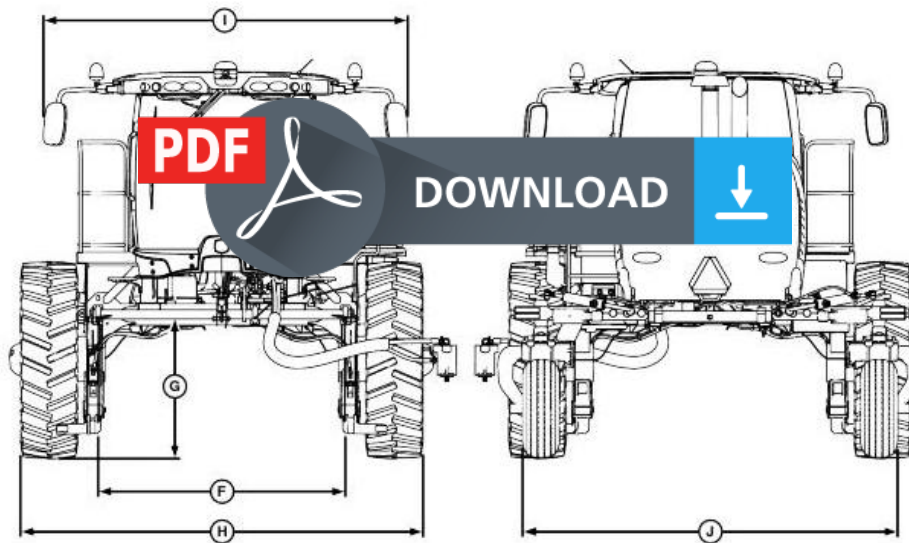

Front and Rear of Windrower

[← Go to Section TOC](#)

Section 10 page 30

TM130119-REPAIR TECHNICAL MANUAL

Covers: W235

Type: Service Manual

Language: English

Pages: 870

Format: PDF

Features: Bookmarked, searchable, printable

Compatibility: Windows/Mac/Tablet/Mobile

This service manual contains important information for the maintenance, troubleshooting and servicing of the **John Deere W235 Self-Propelled Draper Hay&Forage Windrower Service Repair Technical Manual (TM130119)**

In this manual you will find detailed specifications, illustrations, schematics, diagrams and step-by-step procedures to properly service and diagnose the machine to the manufacturer's standards.

Contents:

- General Information
- Specifications
- Serial Number Location
- Engine Specifications
- Engine Diagnostics
- Engine Tests and Adjustments
- Engine Repair
- Power Train
- Transmission
- Axles
- Differential
- PTO
- Hydraulic System
- Electrical System
- Electrical Tests and Diagnostics
- Wiring Diagram / Schematic
- Ignition and Charging
- Steering
- Brakes
- Wheels
- Operator's Platform
- Body Panels
- Disassembly and Assembly
- Diagnostics, Tests and Adjustments
- Troubleshooting
- and much more...

Please note this manual is in **downloadable PDF format only**. If you have any questions about this product or would like to request sample pages, please contact us and reference the product name or SKU.

IMPORTANT:

Prevent flexing damage to bellows during removal and installation. Install bellows alignment tool to prevent flexing.


**LEGEND:**

- A Exhaust Bellows Alignment Fixture
B Bellows

Assembly

Install exhaust bellows alignment fixture (A) on bellows (B) alignment rings.

[7] -

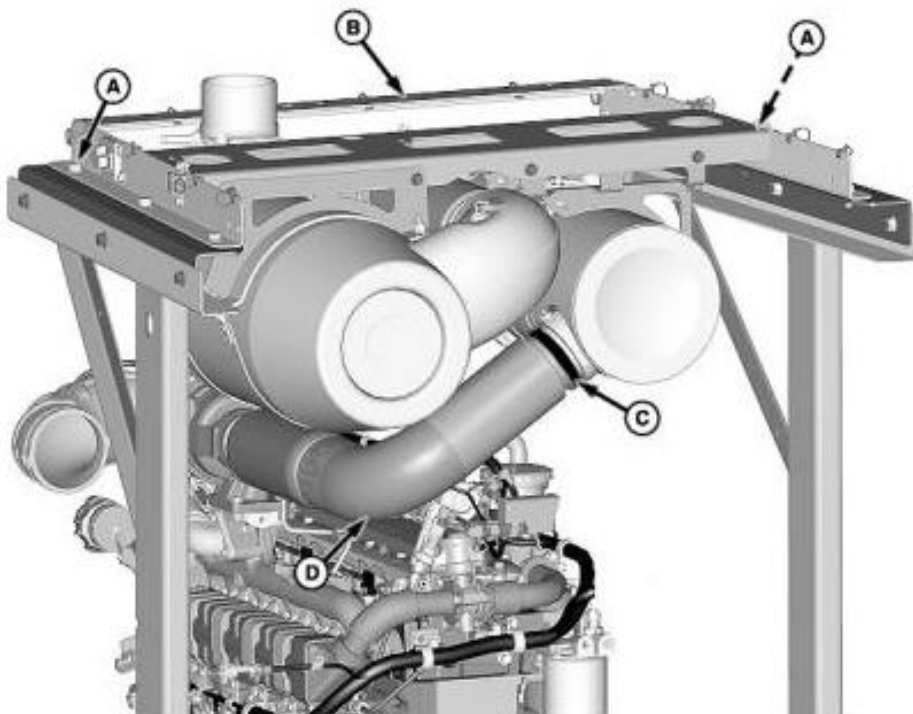**Aftertreatment Assembly****LEGEND:**

- A Cap Screws (6 used)
B Aftertreatment Assembly
C DOC/DPF Filter-to-Bellows Clamp
D Elbow

Loosen cap screws (A) and move aftertreatment assembly (B) forward to specification.

Item	Measurement	Specification
Aftertreatment Device Assembly	Distance	4 mm (0.2 in.)

[8] - While supporting bellows tube assembly at elbow (D), remove clamp (C), bellows tube assembly, and steel ring gaskets at each end of bellows assembly. Discard clamp and gaskets.



Thank you very much
for your reading.
Please click here
to get more information.